



Instrument Cluster

Removal


1. Disconnect the battery ground cable.
2. Remove the instrument cluster finish panel. For additional information, refer to [Section 501-12](#).
3. Remove the lower steering column cover.
 1. Remove the two bolts.
 2. Position the parking brake release aside.
 3. Remove the lower steering column cover.

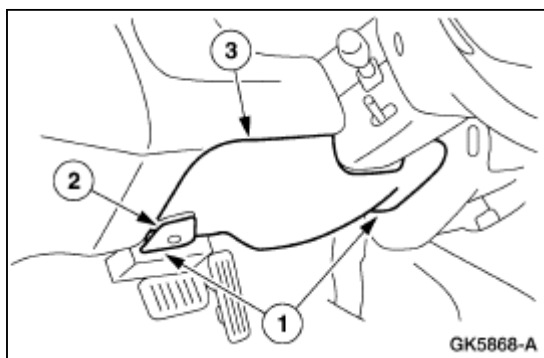

4. Remove the instrument panel steering column opening cover reinforcement (04502).
 - Remove the five screws.

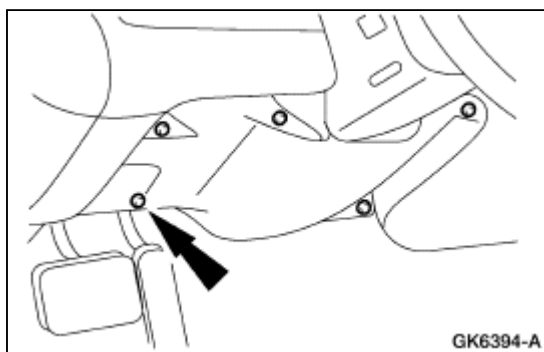


5. Position the transmission range indicator cable out of the way.
 1. Disconnect the cable.
 2. Remove the bolt.
 3. Position the transmission range indicator cable out of the way.

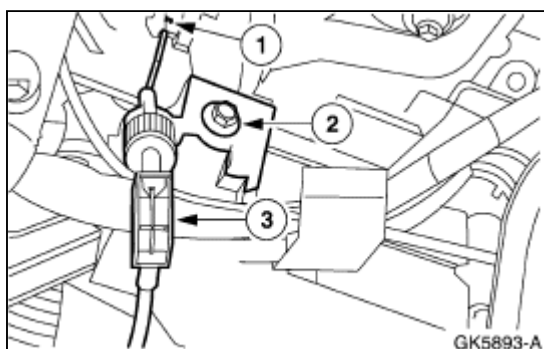

6. Remove the instrument cluster aside.

1. Remove the screws.
2. Remove the instrument cluster aside.
 - Disconnect the electrical connector.

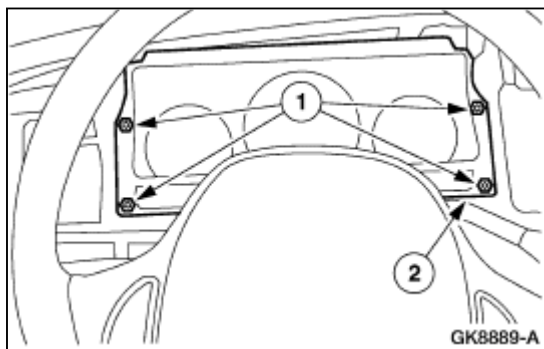

Installation

1. To install, reverse the removal procedure.
-